Thank you for purchasing a Sony Ericsson G700 Business Edition. For additional phone content, go to *www.sonyericsson.com/fun*.

Register now to get free online storage and special offers at *www.sonyericsson.com/myphone*.

For product support, go to *www.sonyericsson.com/support*.

This is the Internet version of the User's guide. © Print only for private use.

Accessories – More for your phone

Bluetooth™ Headset HBH-PV703

Go wireless with a powerful headset

GPS Enabler HGE-100

Get more from your phone - add GPS technology. Know where you are, where you're going and how to get there.

Bluetooth™ Car Speakerphone HCB-150

High performance car handsfree with text to speech for convenient calls on the road

These accessories can be purchased separately but may not be available in every market. To view the full range, go to *www.sonyericsson.com/accessories*.

This is the Internet version of the User's guide. © Print only for private use.

Contents

Getting started 6
Welcome 6
Instruction symbols 6
Additional help 6
Package 7
Overview 8
Before using your phone 10
First time start-up 12

Getting to know the phone 14
Turning the phone on and off 14
Standby 14
The screen 14
Navigation 15
Finding the applications 15
Using the applications 16
Task manager 16
Main menu overview* 17
Status bar 18
Importing contact entries 19
Updating software 19
Sound 19
Memory card 19
Notes 20
Connecting accessories 22
Entering text 22

Calling 29
Networks 29
Making a call 29
Receiving a call 30
Handling two or more calls 30
Call log 31
Handsfree 31
More features 31
Using contacts 32
Creating contacts 32
Editing contacts 32
Managing contacts 33

Messaging 34
Before you use Messaging 34
Shortcut to Messaging 34
Messages 34
Folders 34
SMS text message 35
MMS picture message 35
Email 37
More about Messaging 38

This is the Internet version of the User's guide. © Print only for private use.

Internet 41
Internet browser 41
RSS feeds 42
Blog 42
Media 43
Shortcut to Media 43
Main functions 43
Transferring media files 43
Updating media libraries 43
Photos and pictures 43
Music and audio tracks 45
Video 46
Entertainment 47
PlayNow™ 47
FM radio 47
TrackID™ 49
Connectivity 50
PC Suite 50
USB connection 50
Synchronization 51
Bluetooth™ connection 52
Connections manager 52
Wap push 52
Certificate manager and Java certificates 53
More features 54
Managing files and applications 54
Master reset 55
Power save 55
Screen saver 56
Important information 57
Declaration of Conformity for G700 Business Edition 67
Index 68

This is the Internet version of the User's guide. © Print only for private use.

Sony Ericsson G700 Business Edition

UMTS 2100 GSM 900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB or its local affiliated company at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2008

Publication number: 1213-5768.1

Attention:

Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, *this applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, for example, ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

The Liquid Identity logo, PlayNow, TrackID and MusicDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony, Memory Stick Micro and M2 are trademarks or registered trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Bluetooth and the Bluetooth logo are trademarks or registered trademarks of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

Real is a trademark or a registered trademark of RealNetworks, Inc. Copyright 1995-2008, RealNetworks, Inc. All rights reserved.

Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries/regions.

Microsoft, Microsoft Excel, Microsoft Word, Microsoft PowerPoint, Microsoft Outlook and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/regions.

End-user license agreement for Sun™ Java™ J2ME™.

This is the Internet version of the User's guide. © Print only for private use.

Quickoffice is a trademark or a registered trademark of Cutting Edge Software, Inc.

Restrictions:

1 Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2 Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations and the U.S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries/ regions. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S. State Department's Nonproliferation Sanctions List.

3 Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

This is the Internet version of the User's guide. © Print only for private use.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Note: Sony Ericsson advises users to backup their personal data information.

All illustrations are for guidance only and may not accurately depict the actual phone.

This is the Internet version of the User's guide. © Print only for private use.

Getting started

Welcome

Welcome to the world of a G700 Business Edition user.

This User guide helps you get started using your new phone. To get the most out of your phone, please read this chapter first.

Instruction symbols

The following symbols appear in the User guide:

Note

Tip

Additional help

The complete user documentation for your phone consists of:

- **User guide –** an overview of your phone (this user guide).
- **Help in the phone –** in most applications Help is available in the More menu.
- **Web guide –** an up-to-date user guide with step-by-step instructions and additional information on features available in your phone. You can access the Web guide at *www.sonyericsson.com/support*.

To access the Web guide from your phone

1 From standby select Menu > Internet.
2 Select More > View > Bookmarks > Web Guide.

Care instructions

- Use a moist cloth when you clean the screen.
- Only use the stylus provided, or your fingertips, when selecting items on the screen.

For detailed care instructions, see *Recommendations for care and safe use of our products* on page 60.

This is the Internet version of the User's guide. © Print only for private use.

Package

1	Phone G700 Business Edition
2	Charger CST-70
3	USB cable DCU-65
4	Battery BST-33
5	Stylus
6	Handsfree HPM-62
7	User guide
8	CD with PC suite and Media manager software

If your package does not include all the listed items please contact your retailer.

This is the Internet version of the User's guide. © Print only for private use.

Overview

1	Earspeaker
2	Screen
3	Menu selection key
4	Note key (for Note application)
5	Back key
6	5-way navigation key
7	Silent key
8	C key (Clear)
9	Media player key
10	Messaging key
11	Volume down key
12	Volume up key
13	On/off button

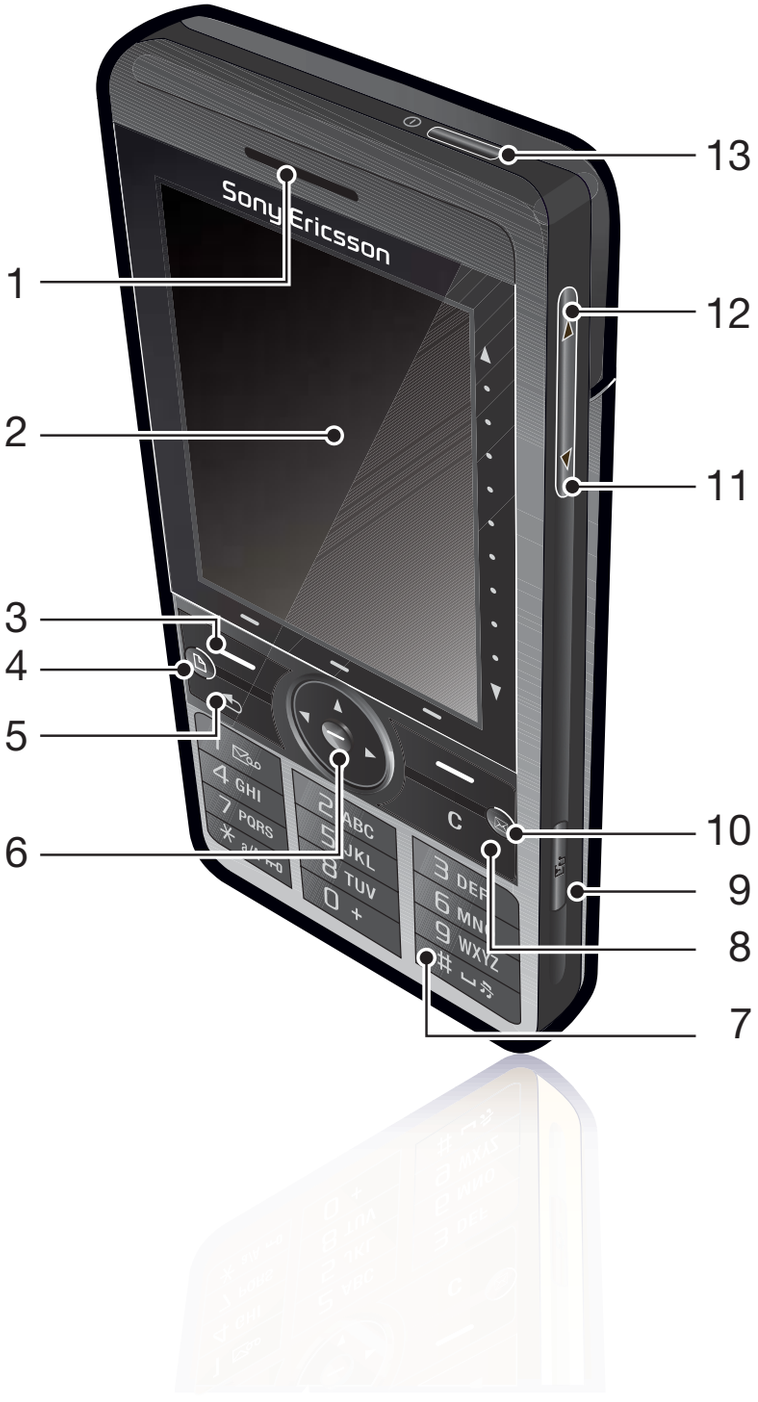

This is the Internet version of the User's guide. © Print only for private use.

14	Battery cover
15	Loudspeaker
16	Microphone
17	Strap holder
18	Indicator light
19	Connector for charger and accessories
20	Memory card slot
21	Lock key
22	Stylus

This is the Internet version of the User's guide. © Print only for private use.

Before using your phone

SIM card

You receive a SIM (Subscriber Identity Module) card when you register with a network operator. The SIM card keeps track of your phone number, the services included in your subscription and contacts. A PIN code is supplied with the SIM card and must be entered, if requested, when you turn your phone on for the first time.

To insert the SIM card

1 Open the battery cover by pressing and pulling the lower part of the cover.

2 Remove the battery.

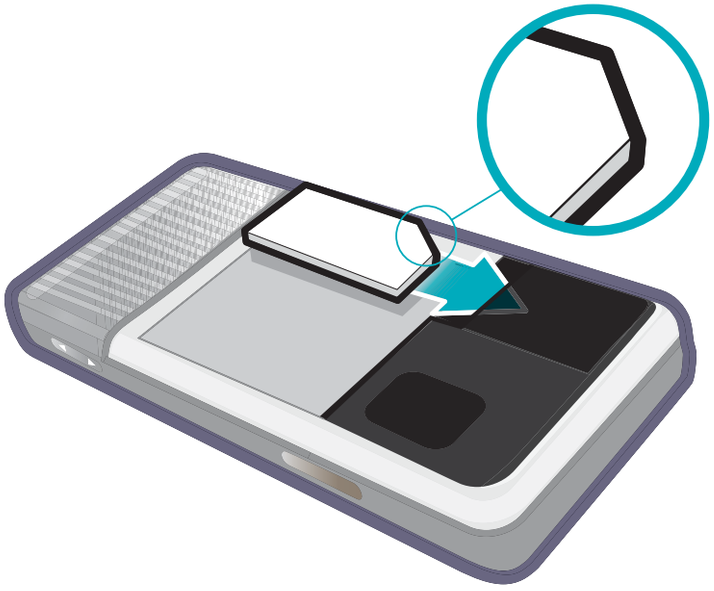

3 Insert the SIM card into the SIM card holder. Make sure you insert it as shown in the image.

Battery

To insert the battery

1 Detach the charger (if connected).
2 Open the battery cover by pressing and pulling the lower part of the cover.

This is the Internet version of the User's guide. © Print only for private use.

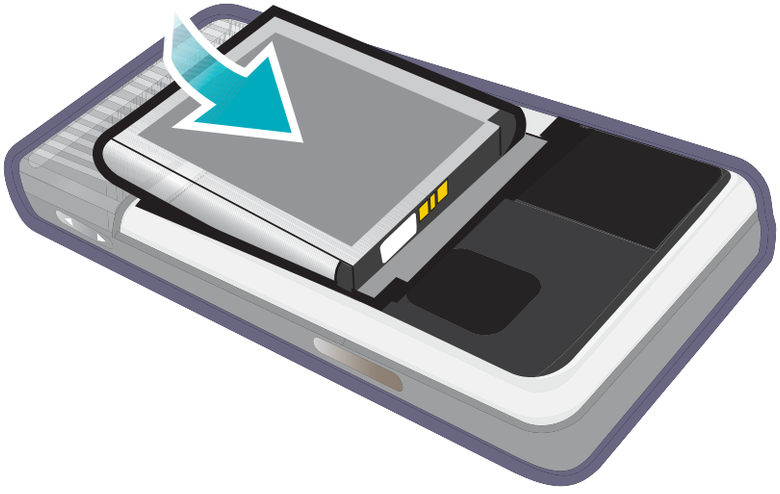

3 Insert the battery.

The battery needs to be charged if the indicator light flashes red, or the low battery message appears on the screen. To fully charge the battery could take up to 2.5 hours.

To charge the battery

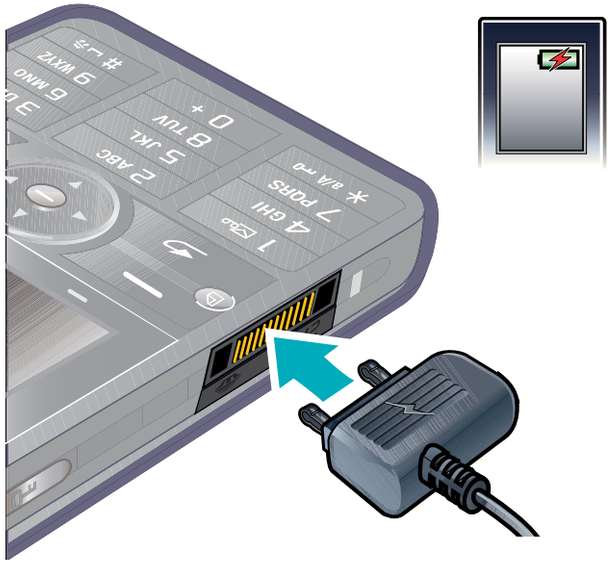

1 Connect the charger to the mains.
2 Connect the charger to the phone.

To disconnect the charger

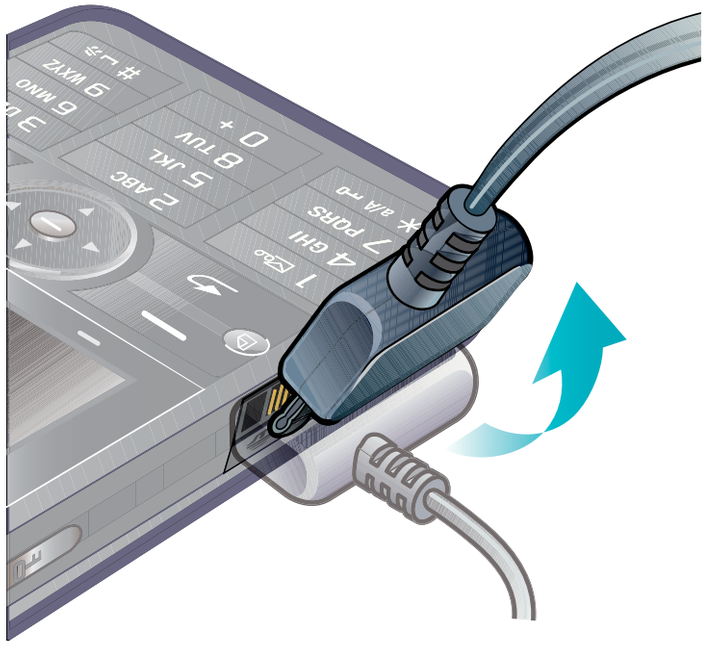

- Remove the charger by tilting the plug upwards.

This is the Internet version of the User's guide. © Print only for private use.

First time start-up

Before you can use your phone you need to insert the SIM card, and insert and charge the battery.

To turn on the phone

1 Press and hold down the On/off button.
2 Select Phone on.
3 Select a language.

All languages except UK English will be deleted once you have selected a language. You can download additional languages from www.sonyericsson.com/support.

4 Enter your PIN, if requested.
5 Select Done.

If you make a mistake when you enter your PIN code, you can delete the number by pressing C. If you enter the wrong PIN code three times in a row, the SIM card is blocked. To unblock it, you need to enter the PUK code supplied with your SIM card.

The start-up screen is referred to as standby in this User guide.

IMEI number

IMEI (International Mobile Equipment Identifier) is a 15-digit number. Your operator can use the IMEI number to enable a complete barring of your phone if it is stolen. The number is printed underneath the battery compartment. You can also view the number on the phone display.

To view the IMEI number in your phone

From standby enter *#06#.

Keylock

Your phone has a dedicated lock key making it easy to lock and unlock the keypad on your phone. The automatic keylock on your phone is turned on as default.

To turn off the automatic keylock

1 From standby select Menu > Settings > Security > Locks.
2 Unmark the Automatic keylock check box.

To lock and unlock the keypad using the lock key

- Press the lock key.

This is the Internet version of the User's guide. © Print only for private use.

Wizards

There are three wizards available to help you set up your phone. The Setup wizard, the Internet wizard and the Email wizard. The Setup wizard and the Internet wizard are launched the first time you start the phone. The Email wizard is launched when first launching Email accounts. It is possible to launch all wizards from the Main menu at any time. For more information about the wizards see the Web guide.

This is the Internet version of the User's guide. © Print only for private use.

Getting to know the phone

Turning the phone on and off

To turn on the phone

1 Press and hold down the On/off button.
2 Select Phone On.

To turn off the phone

1 Press and hold down the On/off button.
2 Select Power Off.

Standby

Standby is the starting point for a number of tasks. It is displayed when you turn on your phone, or when no application is shown on the screen. The standby view is an application that can be changed.

To change the view of standby

1 From standby select Menu > Settings > Display > Standby application.
2 Select:
- Business to show the Today view.
- None to show an enlarged clock. No panels or shortcuts will be shown.
- Default to show the panels.

The screen

The screen is touch-sensitive. You can use the stylus or your fingertips to select items.

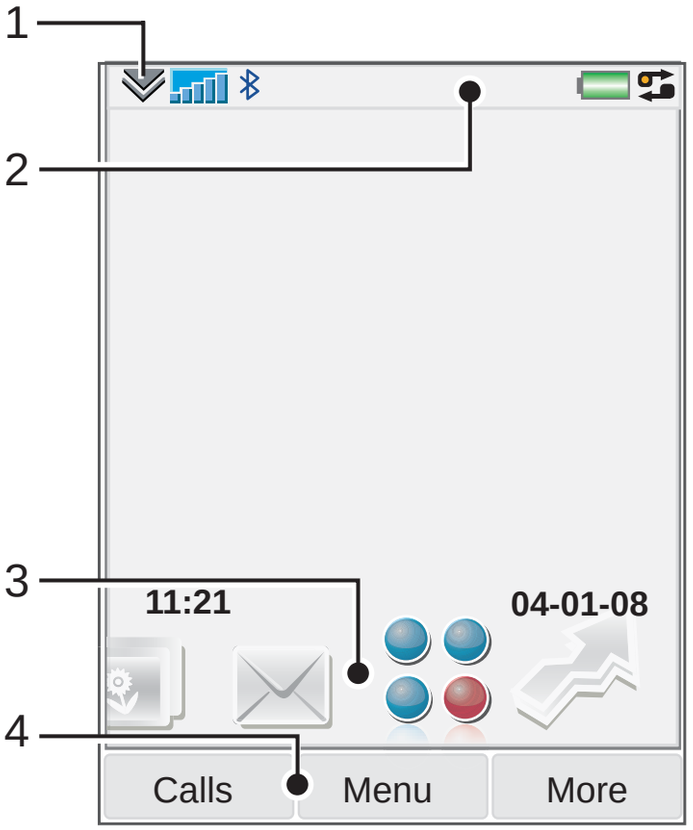

1	Status bar menu
2	Status bar with icons

This is the Internet version of the User's guide. © Print only for private use.

3	Panels
4	Touch options

Navigation

There are several ways to navigate menus and select items in your phone. You can use the 5-way navigation key, back button, stylus, keyboard navigation keys, touch options or your fingertips.

5-way navigation

The 5-way navigation key consists of a ring and a center key. The ring is used to go up ◉ and down ◉, left ◉ and right ◉. The center key ◉ is used to select.

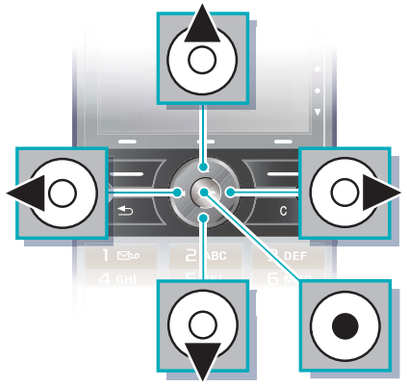

Back key

You can press ⮌ to return to the previous screen or menu. You can press and hold down ⮌ to return to standby.

Stylus

You can use the stylus to select items on the screen, to navigate menus or to pan multimedia pictures.

Finding the applications

Panels

Using panels you get quick access to applications and tasks. By default four panels are always shown. These four are My shortcuts, Favourite contacts, Calendar and New messages. There are several other panels you can add and remove. For more information about panels, see the *Web guide at www.sonyericsson.com/support*.

To use panels

- Use ◉ and ◉ to scroll through the panels. Press ◉ to select a panel.

To add additional panels

1. From standby select More > Settings.
2. Mark the panels you want and select Save.

This is the Internet version of the User's guide. © Print only for private use.

Main menu

All applications in your phone can be found in Main menu.

To access Main menu

- From standby select or Menu depending on what Standby application is active.

To change the view of Main menu

1. From standby select Menu.
2. Select More.
3. Select an option.

Using the applications

To start an application

- Select an application.

To close an application

- Press and hold down .

To switch to another application

- Use Task manager.

For more information see *Task manager* on page 16.

Task manager

Task manager helps you switch between applications. Leaving an application via Task manager rather than closing it, lets you return to the the application in the state that you left it. This is useful, for example, when cutting and pasting text from one application to another.

To switch to another application

1. Select in the status bar.
2. Scroll to the wanted application and select Switch.

To end an application

1. Select in the status bar.
2. Scroll to the wanted application and select End.

This is the Internet version of the User's guide. © Print only for private use.

Main menu overview*

Organizer
File manager, Tasks, Notes, Quickoffice™, Time & alarms, Calculator, Converter and more

Internet
Internet browser

Entertainment
Music applications, TrackID™, RSS feeds, radio, games and more

Calendar
Touch calendar

Messaging
Messaging application

Media
Media application, where you can handle all your media files, such as music, videos and more

Calls
Call log

Contacts
Your contacts

Settings
Email wizard and various settings

** Some menus are operator-, network-, and subscription-dependent.*

This is the Internet version of the User's guide. © Print only for private use.

Status bar

Status bar icons

You can tap an icon to get more information or to start an application. Below is a short description of the most common icons appearing in the status bar.

Icon	Function
	3G available
	Battery strength
	Bluetooth headset connected
	Bluetooth activated
	Current line selection (Alternative Line Service available on the SIM card)
	All calls diverted
	Email message received
	Flight mode
	Internet connection activated (flashes when data is transferred)
	Keylock activated
	Missed incoming call
	Picture message received
	Muted microphone
	Ring volume set to zero
	Signal strength in phone mode
	Silent mode
	Text message received
	Speakerphone activated
	Status bar menu
	Task manager
	Voicemail received

Status bar menu

You can use the status bar menu to quickly get access to:

- New call, SMS, MMS and more.
- Connections.
- Volume, time and keylock.

To access the status bar menu

- Select in the status bar.

This is the Internet version of the User's guide. © Print only for private use.

Importing contact entries

You can import contact information by:

- Copying contacts stored on your SIM card.
- Transferring contacts from a computer application using the synchronize function.
- Transferring contacts from another phone using Bluetooth™ wireless technology.

Updating software

When an improved software version for your phone is available, you can update the phone using the Sony Ericsson update Service at *www.sonyericsson.com/support*.

Sound

To set the ear speaker volume during a phone call

- Press the volume up and volume down keys.

To set the volume for multimedia, alarm, ringtones and message alerts

1 Select > Volume.
2 Select the corresponding slider.
3 Adjust the volume using the stylus.

To set the phone to silent

1 Select > Volume.
2 Mark the Silent mode check box.

From standby you can press and hold down # to switch silent mode on or off.

Transfer sound

During an ongoing call or when listening to music, you can transfer the sound to a connected accessory such as a Bluetooth headset.

To transfer sound

1 Select > Volume.
2 Select More > Transfer sound.

Memory card

The phone has a slot for Memory Stick Micro™ (M2™) memory cards next to the connector. The phone supports up to 16GB memory cards. This memory

This is the Internet version of the User's guide. © Print only for private use.

behaves like a normal disk drive. You can access it as a USB mass storage device from a PC, to transfer files quickly.

To insert the memory card

- Insert the memory card into the slot.

To remove the memory card

- Press the edge of the memory card and then release it.

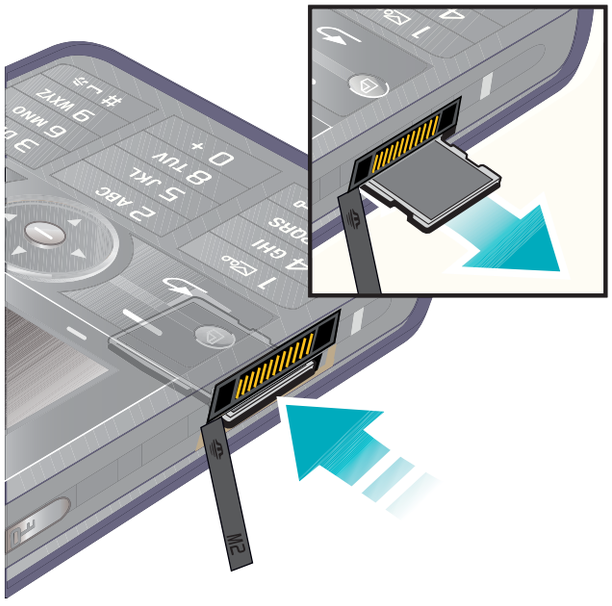

! *Do not remove the memory card during file transfer.*

Notes

You can take notes by entering text or drawing sketches, and set reminders for important events.

To create a new note

1 Press ◎ and select New.
2 Use the toolbar to create your note.
3 Select File to classify your note.

This is the Internet version of the User's guide. © Print only for private use.

Notes toolbar icons

	Scribble mode selected. Select to switch to text mode
	Text mode selected. Select to switch to scribble mode
	Use the stylus as an eraser for sketches
	Select a background colour
	Set a reminder

To edit a note

1 Press and select a note.
2 Edit the text by switching to text mode.
3 Edit the sketch by switching to scribble mode. Select to use the stylus as an eraser.

Managing your notes

You can classify your notes, show them in a grid or a list, or synchronize them with a remote server.

To change notes view

1 Press and select More > Settings.
2 Select an option.

To view different notes folders

1 Press and select More > View folder.
2 Select an option.

To search for notes

1 Press and select More > Find.
2 Enter the search phrase and select Find.

To synchronize your notes

- Select More > Notes manager > Synchronize.

Only the text part of your notes will be synchronized.

You need a remote synchronization account first. For more information, see the Web guide, Synchronizing data remotely.

This is the Internet version of the User's guide. © Print only for private use.

Connecting accessories

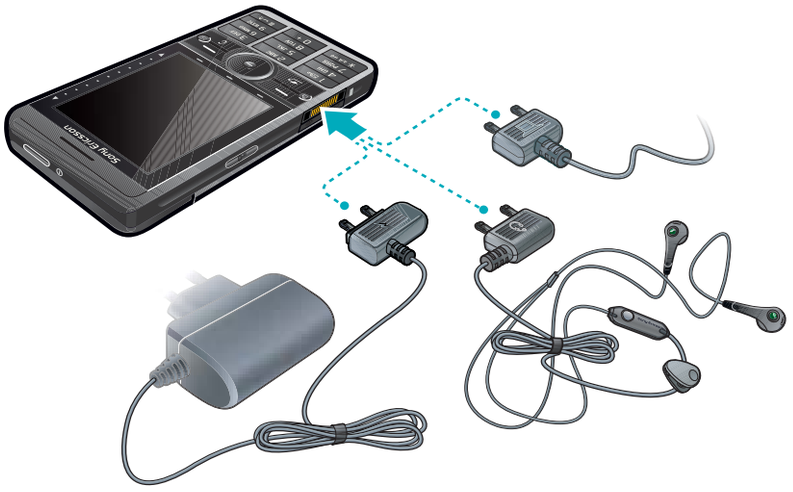

To connect an accessory

- Connect the accessory to the side of your phone.

! *Tilt the plug upwards when you disconnect the accessory.*

Entering text

You can enter text by using the keypad, handwriting recognition or on-screen keyboard.

Entering text using the keypad

You can enter English by using keypad prediction or multitap:

- Keypad prediction – enter words by a single press of a key to input any of the characters associated with that key.
- Multitap – enter Latin letters by pressing a key containing the letter, until the desired letter appears.

You can enter Chinese characters by using Pinyin or Stroke:

- Pinyin – enter Chinese characters by pressing the keys containing its Pinyin letters.
- Stroke – enter Chinese characters by pressing the keys containing its strokes. Strokes are grouped into five categories and represented by 1 - 5 JKL.

Number Key	Stroke Category	Basic Stroke	Example
1	一	一	王 十 在 七 天
		丿	海 红 牡 状 习
2 ABC	丨	丨	中 业 上 门 丑
		亅	小 水 打 子 承
		丨	直 真 质 草
3 DEF	丿	丿	八 九 丹 风 片
		丿	香 千 匕 后 丢
		丿	而 页 面 学 殷
4 GHI	丶	丶	六 学 雷 心 性
		乀	人 火 又 送 林
		し	四 西 酉 酸

This is the Internet version of the User's guide. © Print only for private use.

Number Key	Stroke Category	Basic Stroke	Example
5 JKL	乛	一	山 巨 屯 母 凶
		丿	么 去 公 约 能
		亻	女 要 好 巡 巢
		𠂉	衣 以 饭 收 长
		丨	我 或 民 成 伐
		丶	心 必 思 忘
		乚	电 也 毛 兄 孔
		𠂆	专 传 转
		𠂇	马 与 张 号 费
		𠂊	鼎 鼐
		一	写 字 皮 通 免
		冂	口 已 户 书 骨
		冂	力 习 也 同 永
		冂	又 之 登 多 社
		𠂎	及 极 廷 建
		𠂏	阿 队 陈 那 部
		𠂐	乃 透 鼐 隽 杨
		𠂆	凸
		亅	狗 豹 家 逐 狂
		乙	乙 九 瓦 飞 风
		𠂉	话 计 认 讯
6 MNO	*? (Wild card key)*		

To switch between keypad prediction and handwriting recognition

- Press and hold down * a/A.

To switch input languages

- Press and hold down # ␣.

To switch between upper case and lower case

1. Select English as the input language.
2. Press * a/A.

To enter the word “large“ using keypad prediction

1. Switch to keypad prediction mode.
2. Select English as the input language.
3. Press 5 JKL, 2 ABC, 7 PQRS, 4 GHI, 3 DEF.
4. Select the word "large" from the candidate list.

To enter the word “large“ using multitap

1. Switch to handwriting recognition mode.
2. Select English as the input language.
3. Enter the letter "l" by pressing 5 JKL three times.
4. Enter the letter "a" by pressing 2 ABC once.
5. Enter the letter "r" by pressing 7 PQRS three times.
6. Enter the letter "g" by pressing 4 GHI once.
7. Enter the letter "e" by pressing 3 DEF twice.

You cannot use multitap in keypad prediction mode.

This is the Internet version of the User's guide. © Print only for private use.

To switch between Chinese input methods

1 Select Chinese as the input language.
2 Press * a/A .

To enter " 信息 " using Pinyin input

1 Select Chinese as the input language.
2 Select Pinyin as the input method.
3 Enter "xin" by pressing 9 WXYZ, 4 GHI, 6 MNO.
4 Select "xin" using the navigation key, and then select " 信 " from the candidate list.
5 Enter "xi" by pressing 9 WXYZ, 4 GHI.
6 Select "xi" using the navigation key, and then select " 息 " from the candidate list.

To enter " 信息 " using Stroke input

1 Select Chinese as the input language.
2 Select Stroke as the input method.
3 Enter " 丿", " 丨" and " 丶" by pressing 3 DEF, 2 ABC, 4 GHI.
4 Use the navigation key to select " 信 ".
5 Enter " 𠂉", " 丨" and " 𠃌" by pressing 3 DEF, 2 ABC, 5 JKL.
6 Select " 息 " from the candiate list.

To enter " 互 " using the wild card key

1 Select Chinese as the input language.
2 Select Stroke as the input method.
3 If you only know that " 一 " is the first and the last stroke of the character " 互 " and that the total number of strokes is four, enter 1, 6 MNO, 6 MNO, 1.
4 Select " 互 " from the candidate list.

To enter symbols

1 Open the symbol table by pressing 0 +.
2 Use the navigation key to select a symbol.

This function is not available when you are in number input mode 12 .

Entering text using handwriting recognition

Handwriting recognition translates stylus gestures written directly on the screen into letters, numbers or other characters, and displays these characters as text.

For more information, see *To switch between keypad prediction and handwriting recognition* on page 23.

You cannot use keypad prediction in handwriting mode.

The handwriting input mode screen consists of an upper and a lower part, divided by an arrow in the middle on the right edge.

This is the Internet version of the User's guide. © Print only for private use.

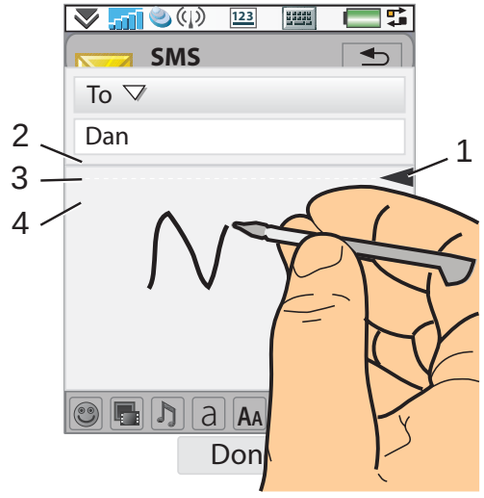

- 1 – arrow that splits the text mode screen into an upper part and a lower part.
- 2 – area to write the digits and symbols.
- 3 – area to write upper-case letters and Chinese characters.
- 4 – area to write lower-case letters and Chinese characters.

Most letters can be written through different stroke patterns. The upper case and lower case depend on the location on the screen, and are unrelated to the pattern.

To write Chinese characters

1 Select Chinese as the input language.
2 Write Chinese characters below or in line with the arrow. You can select characters from the candidate word list.

To write Chinese punctuation

1 Select Chinese as the input language.
2 Write Chinese punctuation below or in line with the arrow.

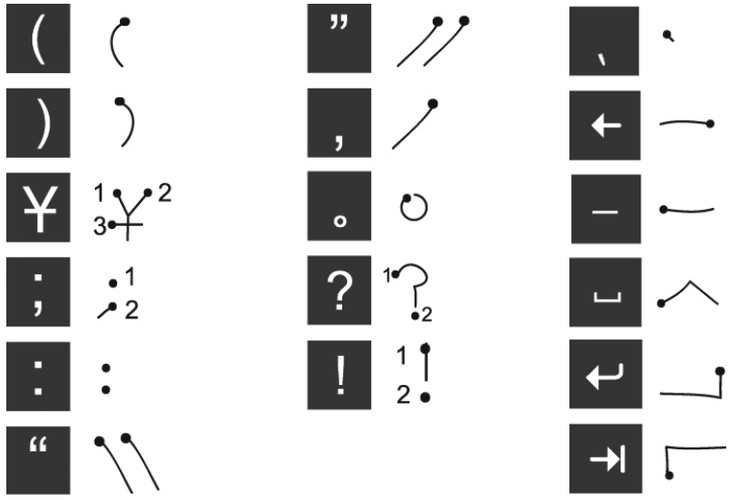

Start each stroke at the dotted end.

This is the Internet version of the User's guide. © Print only for private use.

To write Latin letters

1 Select English as the input language.

2 Write lower-case letters below the arrow; upper-case letters in line with the arrow.

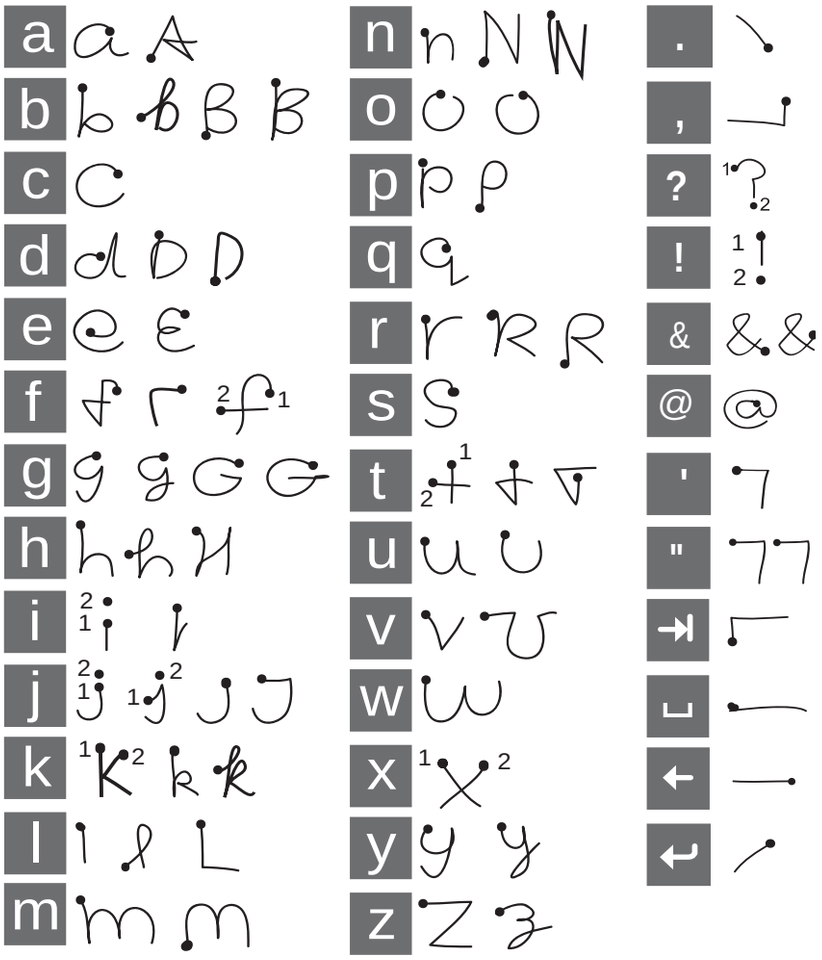

To write numbers

- Write numbers above the arrow.

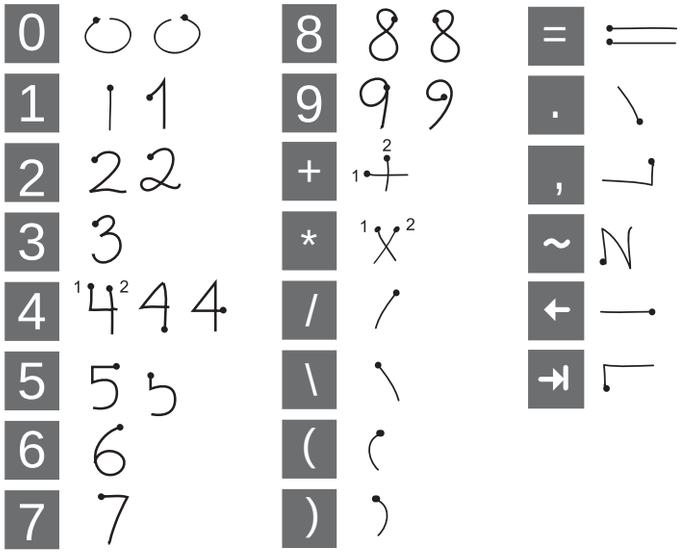

To write accented letters

1 Select English as the input language.

2 Write the basic letter and then write the accent to form the accented letter. For example, to enter the character "à", write "a" below the arrow, followed by a backward slash "\" above "a".

! *You can only write accented characters in Single-character recognition.*

This is the Internet version of the User's guide. © Print only for private use.

To write extended characters

1 Select English as the input language.

2 Draw a slash mark "/" from the bottom up, followed by an extended character below the arrow. For example, to input "%", write "/%" below the arrow.

You can also tap the icon and select often-used symbols using your stylus.

To use special gestures

- Use special gestures to perform functions like deleting characters and entering spaces.

	Switch between single-character and multi-character recognition
	Switch between Chinese and English input languages
	Cut highlighted text
	Copy text
	Paste text
	Undo an action

For more information on how to highlight text, go to *To highlight text with the stylus* on page 28.

To use multi-character recognition

1 Switch to multi-character recognition by drawing .

2 You can enter several characters at one time. For example:

- Write one English word like "hello" in English input mode.

This is the Internet version of the User's guide. © Print only for private use.

- Write several Chinese characters like " 你好 " in Chinese input mode.
- Write several digits like "12345678" in any input mode.

Entering text using the on-screen keyboard

The on-screen keyboard enables you to select characters and symbols with the stylus. The on-screen keyboard can be set to different languages.

To use the on-screen keyboard

1 Tap the on-screen keyboard icon located in the status bar.
2 Use your stylus to use the on-screen keyboard.

Editing text

When in text entry mode, you can select More > Text options to find more options.

You need to highlight text first before using copy or cut functions.

To highlight text with the stylus

- Hold and press the stylus at the end of the text then drag the stylus across the text.

To activate word suggestion

- When in text entry mode, select More > Text options > Word suggestions.

This is the Internet version of the User's guide. © Print only for private use.

Calling

Networks

Network coverage

To make or receive a phone call your phone must be within range of a network.

Network settings

You can set how your phone should choose an available network when you are outside your operator's coverage area. From standby you can find the settings in Menu > Settings > Connectivity > Mobile networks.

Making a call

To make a call from standby

- Enter the phone number (including the area number) on the keypad and select Call.

To make an international call

1. From standby press and hold down 0+ to get the international call prefix.
2. Enter the country/region code, area code (without the first zero) and phone number.
3. Select Call.

To delete characters when dialling

- When entering a number, you can delete characters by pressing C.

Hide or show your phone number

When dialling, you can choose in the More menu whether to show or hide your phone number to the called party.

Speed dial

You can save up to nine of your contacts as Speed contacts. This means that you can call them using abbreviated numbers (numbers 1 – 9).

To set a speed contact (number)

1. From standby select Menu > Organizer > Speed contacts.
2. Scroll to an empty position and select Add.
3. Select a contact in the list and select Save.

To make a call to a speed contact

1. From standby press the key 1 to 9 that corresponds to the stored speed contact.
2. Select Call.

This is the Internet version of the User's guide. © Print only for private use.

To make an emergency call

1 From standby, enter the emergency number on the keypad.
2 Select Call.

Local SOS numbers

When dialling, you can find local SOS numbers in the More menu.

Usually no SIM card or PIN code is required for emergency calls, but this can be operator-dependent. Contact your operator for more information.

Receiving a call

To answer a call

- Select Yes.

To reject a call with a busy tone

- Select No.

To reject a call with an SMS text message

- Select More > Send SMS to send a pre-defined message to the calling party. Before using this service, enter the settings from standby in Menu > Settings > Calls > Reject with SMS.

The message cost is debited to your prepay card or your phone bill.

To turn on the speakerphone

- During a call, select More > Speakerphone on.

To mute the microphone (shortcut)

- During a call, press and hold down C.

To un-mute the microphone (shortcut)

- During a call, press C.

To mute the ringtone

- Select Mute or press C.

Handling two or more calls

You can handle multiple calls at the same time:

- Put an ongoing call on hold and start a new one, or answer an incoming call.
- Start a conference call during an ongoing call (operator-dependent).
- Extract one party in a conference call for a private talk and put the conference call on hold.
- Retrieve a held call, or end it.

This is the Internet version of the User's guide. © Print only for private use.

Conference call

You can start a conference call if you have one active call and one on hold. The maximum number of conference parties is five.

To make a conference call

1 Make a call and select Hold.
2 Repeat the above step for each party.
3 Select More > Start conference call.

Call log

In the call log you can find call information, such as the type of call, time, date, phone number and call length. From standby select Calls to open it. You can also make a call or a call note directly from this application.

Handsfree

If you connect a handsfree or a Bluetooth™ headset to your phone, you will need to set how to answer an incoming call. From standby select Menu > Settings > Calls > Handsfree.

More features

Some of the features that your phone supports can be found from standby in Menu > Settings > Calls:

- Accept calls – caller filter.
- Add to contacts – add contact data from the last call.
- ALS – line settings, if your SIM card supports two lines.
- Call meter – service to keep track of your call costs.
- Calling cards – call via a calling card server.
- Call waiting – option to get alerted if there is another call on the line.
- Divert calls – divert calls to other numbers.
- Fixed numbers – only special numbers can be called.
- Flag call – reject a call and set a reminder to follow it up later.
- Restrict calls – options to set roaming and international call restrictions.
- Textphone accessory – use of a teletype writer.
- Voicemail – your answering machine.
- Voice control – you can call and answer with voice commands.

This is the Internet version of the User's guide. © Print only for private use.

Many of these features are operator-dependent and may not be available. For more information about these, and other features, see Calling and Settings in the Web guide.

Using contacts

To make a call using Contacts

1 From standby select Menu > Contacts and scroll to the desired contact.
2 Select View to open the entry.
3 Scroll to the desired phone number and select Call.

You can also press ◉ on the 5-way navigation key to open Contacts.

To find service numbers on the SIM card

1 From standby select Menu > Contacts.
2 Select More > View folder > SIM.
3 Select More > Service numbers.

Creating contacts

To create a new contact

1 From standby select Menu > Contacts.
2 Select More > New contact.
3 You can enter contact data on four tabs.
4 Select Save.

If you save contact phone numbers in the international number format, starting with +, you can call directly from Contacts when you are abroad.

Editing contacts

To add a field to a contact

1 From standby select Menu > Contacts.
2 Scroll to a contact and select More > Edit contact.
3 Select More > Add field and mark a field.
4 Select Add.

To edit a contact on the SIM card

1 From standby select Menu > Contacts.
2 Select More > View folder > SIM.
3 Scroll to a contact and select More > Edit contact.

To add a stored picture to a contact

1 From standby select Menu > Contacts and scroll to a contact.
2 Select More > Edit contact.

This is the Internet version of the User's guide. © Print only for private use.

3 Scroll to the Picture field and select Edit.
4 Choose Select and scroll to a picture you want to add.
5 Choose Select > Save.

To add a personal ringtone to a contact

1 From standby select Menu > Contacts and scroll to the desired contact.
2 Select More > Edit contact.
3 Select the audio tab .
4 Scroll to the Ringtone: drop-down menu and select Open > Find sound.
5 Scroll to the sound you want to add.
6 Choose Select.
7 Select More > Save.

Managing contacts

To copy a contact to another folder

1 From standby select Menu > Contacts and scroll to a contact.
2 Select More > Add to > desired folder.

To delete a contact

1 From standby select Menu > Contacts and scroll to a contact.
2 Select More > Delete.

To copy contacts to the SIM card

1 From standby select Menu > Contacts.
2 Mark the desired entries in Contacts.
3 Select More > Add to > SIM.

To copy contacts from the SIM card

1 From standby select Menu > Contacts.
2 Select More > View folder > SIM to open the SIM card.
3 Mark the desired entries.
4 Select More > Copy to Contacts.

This is the Internet version of the User's guide. © Print only for private use.

Messaging

Before you use Messaging

Before you can send or receive messages (except for SMS text messages) you need to set up the necessary accounts. You can use the Internet and Email wizards provided in the phone to download settings or do this manually. See *Setting up Internet, email and MMS* in the Web guide.

Shortcut to Messaging

To start Messaging

- Press ✉ on the keypad.

Messages

You can create, send and receive different types of messages:

	SMS (Short Message Service) – text messages
	MMS (Multimedia Message Service) – picture messages that can include text, pictures and sound
	Email messages
	Beamed messages via Bluetooth

You can also receive:

	Auto setup files for configuring Internet, email and MMS
	Area information messages such as local road reports

Folders

The different types of messages are handled by different accounts. The default account, Messages, handles all messages except email messages. Email messages are handled by email accounts you create yourself. All accounts consist of a number of folders. You can switch between folders by selecting the arrow beside the folder name:

This is the Internet version of the User's guide. © Print only for private use.

- Inbox in Messages – contains all received messages except email messages. In Menu > Settings > Sounds & alerts > Message alerts you can set how you are notified when a message is received.
- Inbox in an email account – contains the received email messages for that particular account.
- Outbox – contains messages ready to be sent.
- Drafts – contains messages that are not ready to be sent. When you are creating a message, and exit the message before sending it, you are asked if you want to save it. If you select Yes, the message is automatically stored in this folder.
- Sent – contains sent messages.
- SIM – a folder located on your SIM card.

SMS text message

To create and send an SMS text message

1 Press ✉ on the keypad.
2 Select Create new message > SMS.
3 Enter the phone number of the recipient using the keys, or tap To: > Select contact and browse to your contact.
4 Write the message and select Send.

MMS picture message

MMS picture messages can include pictures, video clips, animations and sound, organized like a slide presentation with time-based control of playback.

Before you use MMS

Before you can send and receive multimedia messages, you need to download MMS settings. You can use the Internet wizard available in the phone in Menu > Settings > Connectivity > Internet wizard or, if your operator is not supported by this wizard, do this manually. See *Setting up Internet, email and MMS* in the Web guide.

This is the Internet version of the User's guide. © Print only for private use.

An overview of MMS

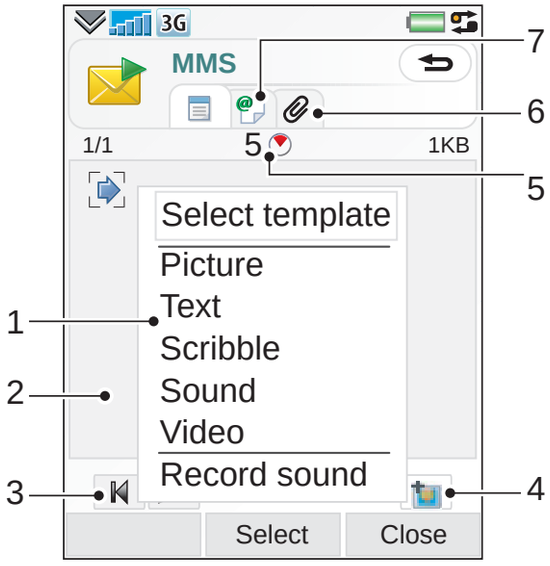

1	Menu options. You can select a template or what you want to add to the message, for example a picture or a sound. (If the menu is not open, select Add.)
2	Entry field (on the detail tab) where you can create your message
3	Playback keys
4	New page icon
5	Time view icon. Opens a view where you can adjust when and for how long your added items will be shown
6	Attachments tab
7	Address tab for the recipient and other details

To create and send an MMS picture message

1. Press ✉ on the keypad.
2. Select Create new message > MMS.
3. Add picture, text and sound as desired.
4. Select @ and fill in the recipient's details. To send a message to several recipients, type a comma between each address.
5. Select Done.
6. Select More > Send.

To read an MMS picture message

- Select the new message.

The first time you open the message it plays automatically. After that, you have to use the playback keys to play it.

This is the Internet version of the User's guide. © Print only for private use.

Email

Before you use email

To use email you require an Internet account and will need to download the necessary email settings.You can use the Email wizard available in the phone under Menu > Settings > Messaging > Email accounts or, if your operator is not supported by this wizard, do this manually. See the Help in the phone or *Setting up Internet, email and MMS* in the Web guide.

Sending email messages

You can create email messages from each email account.

To create and send an email message

1 Press ✉ on the keypad.
2 Select New.
3 Tap To: > Select contact and browse to your contact or tap to the side of To: and write the email address of the recipient. To send a message to several recipients, type a comma between each address.
4 Select Subject: and enter details.
5 Write your message and select Done.
6 Select Send. You have the option to send the message immediately or to save it to Outbox.

Receiving email

Email messages are downloaded from the email server on the Internet or at your office. You can download your email manually or set when your phone should check for new email.

To download email messages manually

1 Press ✉ on the keypad.
2 Select your email account.
3 Select More > Get & send.

To download messages automatically

1 From standby select Menu > Settings > Messaging > Email accounts.
2 Select your email account.
3 Select More > Scheduled download.
4 Mark the Schedule download check box and enter the times when you would like to download email messages.

This is the Internet version of the User's guide. © Print only for private use.

5 Select Save.

For IMAP accounts you can also select Push email and have new email messages pushed to your phone.

To forward an email message

1 From your email account in Messaging scroll to the message you wish to forward.
2 Select More > Forward.

Large attachments increase the size of an email and the connection time needed to send it. It is possible to choose whether to forward the attachment.

Viewing messages

You can choose not to receive large messages and only to receive a header.

To download headers

1 From standby select Menu > Settings > Messaging > Email accounts.
2 Select your email account.
3 Select the Inbox tab.
4 From Download restrictions, select Just headers.
5 Select Save.

To view messages in full screen

1 Press ✉ on the keypad.
2 Select your email account.
3 Select More > Settings > Always fullscreen.

Viewing attachments

To view an attachment you need a viewer for that type of file. Your phone comes with pre-installed viewers for Microsoft® Word, Microsoft® Excel®, Microsoft® PowerPoint®, and Adobe™ Acrobat™ files.

More about Messaging

Deleting email

You can delete a message both locally and on your email server. When you delete it locally, the message body and attachments are deleted but the heading remains. You can download the message again later with the Get & send option. When you delete the message on your server, it is deleted both in your phone and on your server.

This is the Internet version of the User's guide. © Print only for private use.

To find a message

1 Press ✉ on the keypad.
2 Select More > Find message to search through the subject lines, sender details and the text of the message.

! *In an open message,* Find *searches through the message.*

Saving contact details

When you receive a message, you can save the contact details of the person who sent the message.

To save a sender's contact details

1 Select the sender's phone number, name or email address in the details tab or From: in the address tab.
2 Select Add to Contacts.

Disconnecting from the Internet

If your phone is already connected to the Internet when you send an email message or an MMS message it remains connected after sending.

To disconnect from the Internet

1 Select the connection icon, for example , in the status bar.
2 In Connections manager, mark the check box for your connection.
3 Select Close.

Invitations

If you receive an invitation to an appointment via an email message, and you accept, your calendar is updated automatically. You can also reply to and forward an invitation.

Push email

With push email, email messages received in your ordinary mailbox are automatically sent to your phone. You can send messages from your phone, and also use Calendar and Contacts as if you were using the ordinary email application in your computer.

Depending on your operator and market, you can have a different push email client installed on your phone.

IMAP Push email is also available on your phone.

This is the Internet version of the User's guide. © Print only for private use.

To set up IMAP Push email

1 From standby select Menu > Settings > Messaging > Email accounts.
2 Select your email account.
3 Select the Basic tab.
4 Select IMAP in Connection type:.
5 Mark the Push email check box.
6 In Email accounts select More > Always On push email.
7 Mark the Always On check box.
8 Select Save.

For more information about push email see *More about Messaging* in the Web guide, or contact your operator, your service provider or your IT administrator.

This is the Internet version of the User's guide. © Print only for private use.

Internet

Internet browser

To use the browser you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

To start the browser

- From standby select Menu > Internet.

Navigation

All navigation commands and settings are available from the More menu. The most common operations are also available as keyboard shortcuts.

Key	Function
1	Enter address
2 ABC	Open the bookmarks list
3 DEF	Close the current page
4 GHI	Go to the homepage
5 JKL	Switch between loading and not loading pictures
6 MNO	Switch between normal and Fullscreen display
7 PQRS	Switch to the next page
8 TUV	Open the Configuration menu
9 WXYZ	Add a bookmark for the current page
* a/A	Find (on the Internet or on the current page)
#	Go to the top or bottom of the page
0 +	Stop or Reload the current page

Settings

To switch to landscape view

- With the browser open select More > Settings and mark the Landscape check box.

To exit landscape view

- Select > Settings and unmark the Landscape check box.

This is the Internet version of the User's guide. © Print only for private use.

RSS feeds

RSS feeds allow you to see when new content has been added to a Web site. You can, for example, get the latest headlines without having to visit the Web site.

You can add feeds directly in the RSS feeds application. An easier way is to add feeds from within the Internet browser.

Before you use RSS feeds

To use RSS feeds you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

To subscribe to an RSS feed

1 From standby select Menu > Entertainment > RSS feeds.
2 Select More > Add feed and enter the address to the feed.
3 Select a folder to add the feed to.

To subscribe to an RSS feed from the Internet browser

1 From standby select Menu > Internet.
2 Navigate to a page that offers RSS feeds.
3 Select and choose between the available feeds.
4 Select a feed and which folder to add it to.

To view an RSS feed

1 From standby select Menu > Entertainment > RSS feeds.
2 Select a feed and select Open.

Blog

Use the Blog function to publish, for example, your photos on the Internet.

To send a photo to a blog

1 Navigate to your photo and select it.
2 Select More > Send as > Blog.
3 Enter a title and text.
4 Select Publish.
The first time you will get a bookmark added in your phone and information about how to edit the blog on the internet.

This is the Internet version of the User's guide. © Print only for private use.

Media

With the Media application you can handle all your media files, such as photos and pictures, music, other audio tracks and video clips.

To open the Media application

- From standby select Menu > Media .

Shortcut to Media

You can also press the dedicated key on the right side of your phone to open Media.

Main functions

In Media you can use these main functions:

- Photo – view, edit, send or blog your photos and pictures.
- Music – categorize and play your music files or other audio tracks.
- Video – play and handle your video clips.
- Settings – change application orientation, update your libraries or use the encoding function.

Transferring media files

Media Manager computer software and USB drivers are included on a CD that comes with the phone. Use Media Manager to transfer media files from CDs or your computer to your memory card in the phone. See the Web guide for more information.

Updating media libraries

The first time you use the Media application, or when you have transferred media files to your phone with the USB cable, your media libraries automatically update.

To manually update media files

- From standby select Menu > Media > Settings > Update library.

Photos and pictures

Viewing and using pictures

In Photo you can view, send and use all pictures saved in your phone memory or on a memory card. From standby select Menu > Media > Photo to select either of these viewing options:

This is the Internet version of the User's guide. © Print only for private use.

- Latest photo - the latest captured photo/video saved in your phone or on a memory card .
- Camera album - photos and videos captured with a camera, presented in chronological order, by month.
- Photo tags - view your photos that you have tagged .
- Pictures - pictures that are not captured with a camera.

To view pictures in a slide show

1 From standby select Menu > Media > Photo and select one of the viewing options.
2 Select View > Start to run an automatic slide show.
3 Select one of the pre-defined sounds or choose your own by selecting Edit.

To send a picture

1 From standby select Menu > Media > Photo and select one of the four viewing options.
2 Select a picture.
3 Select More > Send as and choose to send the file by Bluetooth™, in an MMS message or to a blog.

Remote screen

You can use a compatible Bluetooth™ accessory to view pictures on a remote screen, such as a TV. For a list of compatible accessories go to *www.sonyericsson.com/support*.

To send pictures to a remote screen

1 From standby select Menu > Media > Photo and select one of the viewing options.
2 Select More and mark Remote screen.
3 Select the desired remote screen.
4 Select Yes to enable the Bluetooth™.
5 Open a picture. It is automatically sent to the remote screen.

! *Make sure you are in full screen play view and tap the screen if the slideshow options are not showing.*

Editing pictures

Using the editor, you can photo fix, pan, zoom and rotate your image. There are also filters for effects and picture correction.

To edit a picture

1 From standby select Menu > Media > Photo.

This is the Internet version of the User's guide. © Print only for private use.

2 Select a picture.
3 Select More > Edit.

For more information about the features and how to use them, see the Web guide in your phone or on the Sony Ericsson Web page.

Music and audio tracks

The music player supports formats such as MP3, WMA, WAV, AAC, AAC+ and eAAC+. For a list of all supported media formats, see the Web guide.

To play music or other audio tracks

1 From standby select Menu > Media > Music.
2 Browse for music or tracks by Albums, Artists, Tracks, Compilations, Auto playlists, Playlists, Audiobooks, Podcasts and My recordings.
3 Scroll to the desired track and select Play.

Playback controls

▶	Play
■	Stop
⏮	Skip to previous track
⏭	Skip to next track

To adjust the volume

- Press the Volume keys.

To minimize the music player

- When the music player is open, press and hold down ⮌. The music continues to play. To return to the music player, press ▶ in the Status bar.

Playlists

A playlist describes which tracks to play, and in which order. The playlist only contains links to the tracks, so when you remove tracks from the playlist, the actual sound files are not deleted.

To create a playlist

- With Media open, select Music > Playlists > New playlist.

This is the Internet version of the User's guide. © Print only for private use.

To add songs to a playlist

1 With Music open, mark one or more tracks.
2 Select More > Add to playlist.

Auto playlists

The music player creates automatic playlists based on, for example, how often you listen to the tracks.

Bookmarks

If you stop the playback of an audiobook or a podcast channel, a bookmark is automatically set on this position. For more information, see *Media* in the Web guide.

Video

With Video, you can watch clips stored on your phone. Video can play MPEG-4, H.263, H.264, WMV9 and Real Video formats.

To play a video clip

1 From standby select Menu > Media > Video.
2 Navigate to the clip you want to watch and select Play.

Playback controls

During playback, you can use the playback controls. See *Playback controls* on page 45.

To move within a video clip

- Tap on the progress bar.

To change screen orientation

- During playback, tap the screen in the video playback area to switch between landscape and portrait view.

This is the Internet version of the User's guide. © Print only for private use.

Entertainment

PlayNow™

PlayNow™ is an entertainment download service. You can preview content before purchase.

This service is not available in all countries/regions.

Before you use PlayNow™

To use PlayNow™ you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

Previewing content

You can download a preview sample for most content available at PlayNow™ before deciding to purchase.

To preview PlayNow™ content

1. From standby select Menu > Entertainment > PlayNow™.
2. Select Preview or Play for the content you wish to preview.

Purchasing content

When purchasing content from PlayNow™, the cost of this service is displayed in your phone. The cost is debited to your prepay card or your phone bill.

To purchase PlayNow™ content

- Select Buy next to the content you want to purchase and follow the on-screen instructions.

FM radio

To listen to the radio you need to insert the handsfree, since the radio uses the handsfree cable as an antenna. However, you can still listen to the sound through the speaker or through a Bluetooth™ connected headset.

To listen to the radio

1. Connect the handsfree to the phone.
2. From standby select Menu > Entertainment > FM radio.

To automatically find and store radio channels

- From standby select Menu > Entertainment > FM radio > More > Auto store.

This is the Internet version of the User's guide. © Print only for private use.

To transfer the sound

- When the FM radio is open, select and select, for example, the built-in speaker or a Bluetooth™ headset.

To minimize the radio

- When the FM radio is open, press the back key. The radio continues to play in the background.

To return to the radio

- Select in the status bar.

To turn the radio off

- When the FM radio is open, select Off.

Tuning and presets

To search for radio channels

- When the FM radio is open, select or .

To tune manually

1. When the FM radio is open, select More > Set frequency.
2. Enter the frequency using the keys.

You can also press or to change the frequency in 0.1 MHz steps.

To store a preset

1. When the FM radio is open, tune to the desired channel and select More > Save.
2. Select a preset number between 1 and 20 and select Insert.

To recall a preset

1. When the FM radio is open, select Presets.
2. Scroll to the desired channel and press .

You can use presets 1 to 10 by pressing 1 to 9 WXYZ and 0 +. Press and hold down to store, press briefly to recall.

RDS (Radio Data System)

The RDS functionality lets you set the radio to automatically switch to a channel when it is broadcasting Traffic announcements, TA, or News announcements, NEWS. The radio can also re-tune to the Alternative frequency AF that gives the best reception for the station you have selected.

Not all radio channels transmit RDS information.

This is the Internet version of the User's guide. © Print only for private use.

To access RDS settings

- When the FM radio is open, select More > Settings > RDS options.

TrackID™

You can use TrackID™ to find out the name of a song. You record a few seconds of music using the microphone or from the built-in FM radio. The sample is then sent to the TrackID™ database. If a match is found you can see the name of the artist, the album and the title of the song. The TrackID™ service is free, but your service provider may charge for the data traffic.

! *This service is not available in all countries/regions.*

Before you use TrackID™

To use TrackID™ you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

To identify a song using the microphone

1. From standby select Menu > Entertainment > TrackID™.
2. Hold the phone close to the speaker and select Start.

To identify a song played on the FM radio

- When the FM radio is open, tap .

This is the Internet version of the User's guide. © Print only for private use.

Connectivity

To exchange information between your phone and another device you can use, for example, a USB or a Bluetooth™ connection.

PC Suite

When connecting your phone to a computer, certain tasks require that you have PC Suite for Sony Ericsson installed on your computer. You can install it from the CD delivered with your phone or go to *www.sonyericsson.com/support* for the latest version.

You can use PC Suite for many things, including synchronizing phone data with Microsoft® Outlook® in your computer or making backups of phone data. See *PC Suite* in the Web guide for more information.

PC Suite requires a USB cable connection, but for certain applications you can alternatively use a Bluetooth connection.

USB connection

With a USB connection you can, for example, transfer files between your phone and a computer, synchronize and make backups of phone data.

When you connect your phone and computer using the USB cable two options appear, File transfer mode and Phone mode.

! *To transfer files in file transfer mode you do not need PC Suite installed on your computer. For phone mode, PC Suite is required.*

File transfer mode

In file transfer mode you can transfer files to and from your computer substantially faster compared to phone mode. However, in file transfer mode Microsoft® Windows® Explorer will only show the memory card (if inserted).

! *Do not remove the USB cable from your phone or computer during file transfer as this may cause a loss of data.*

This is the Internet version of the User's guide. © Print only for private use.

To use file transfer mode

1 Connect the USB cable to your phone and computer.
2 **Phone**: Select File transfer.
3 **Computer**: Wait until the memory card appears as an external disk, “PHONE CARD”, in Windows Explorer.
4 Use Windows Explorer as usual to transfer files between the phone and computer.

To disconnect the phone safely from your computer

1 **Computer**: Right-click the removable disk icon in Windows Explorer and select *Eject*.
2 **Phone**: Remove the USB cable from your phone.

Phone mode

In phone mode you can use your computer to synchronize contacts and calendar items, transfer files, use the phone as a modem and more. Applications supported in phone mode include:

- Synchronization
- File Manager
- Mobile Networking Wizard
- Backup Manager
- Download Language
- Application Installer

To use phone mode

1 **Computer**: Install the PC Suite for Sony Ericsson software.
2 Select *Start/Programs/Sony Ericsson/PC Suite for Sony Ericsson*. The application starts.
3 Connect the USB cable to your phone and computer.
4 **Phone**: Select Phone mode.
5 **Computer**: Wait while Windows installs the required drivers.

! *All phone mode applications are marked with green in PC Suite. Only synchronization is described here. For other applications, see PC Suite in the Web guide.*

Synchronization

To synchronize your phone using PC Suite

1 Connect the USB cable to your phone and computer.
2 **Phone**: Select Phone mode.
3 **Computer**: Start PC Suite.
4 Wait until your phone is connected, that is, the *Synchronize Now* button turns green.

This is the Internet version of the User's guide. © Print only for private use.

5 When you have made all the synchronization settings, click *Synchronize Now*.

Bluetooth™ connection

To turn on Bluetooth connection

1 From standby select Menu > Settings > Connectivity > Bluetooth.
2 Select the Settings tab and mark the Bluetooth On check box.

Pairing

For all tasks, except for a single file transfer, it is necessary to set up a permanent and trusted relationship between your phone and the other device. This is called pairing (or bonding).

To pair with another Bluetooth device

1 From standby select Menu > Settings > Connectivity > Bluetooth.
2 Select the Devices tab > New device.
3 Select the device in the list.
4 If you are asked to, enter the passcode (also called passkey).

Connections manager

Connections manager is where you control your Internet connections. You can open and close connections, and you can reset the logs for the connections.

To open Connections manager

- From standby select Menu > Organizer > Connections mgr.

To reset logs

1 From standby select Menu > Organizer > Connections mgr.
2 Select the log you want to reset.
3 Select More > Reset log.

Wap push

To set up your phone to handle incoming WAP push messages

1 From standby select Menu > Settings > Messaging > WAP push.
2 Select Automatically to receive Wap push service loading messages without being prompted.

This is the Internet version of the User's guide. © Print only for private use.

Certificate manager and Java certificates

Digital certificates are used to verify the origin of the Web pages you visit or any software you install.

To view user and CA certificates in your phone

- From standby select Menu > Settings > Security > Certificate manager.

To view Java certificates in your phone

- From standby select Menu > Settings > Security > Java certificates.

This is the Internet version of the User's guide. © Print only for private use.

More features

Managing files and applications

File manager

With File manager you can view, rename, copy, move and delete files and folders in the phone memory and on the memory card. The File manager view has two tabs – the tab for the phone memory and the tab for the memory card.

To open File manager

- From standby select Menu > Organizer > File manager.

Protected files

Downloaded or received files may be copyright-protected. Copyright-protection may prevent content from being copied, modified or transferred. If a file is copyright-protected is displayed next to the file name. If the key symbol is crossed the file has no valid licence, for example, the licence may have expired or there is a pending licence for the file.

Transferring files from a computer

You can access a memory card in the phone as a USB mass storage device from a computer. This way you can browse the memory card folders and transfer files to them.

Launching media files

You can launch media files directly from File manager by selecting them.

Renaming memory cards

You can rename the memory card.

To rename a memory card

1. From standby select Menu > Organizer > File manager.
2. Select More > Device > Format Memory Stick > Rename.

Formatting memory cards

! *All information on the memory card is deleted during formatting.*

To format a memory card

1. From standby select Menu > Organizer > File manager.
2. Select More > Device > Format Memory Stick > Format.

This is the Internet version of the User's guide. © Print only for private use.

Installing applications

You can install applications and other content you use often, for example, ringtones in the phone memory since the memory card is sometimes unavailable when the phone is connected to a computer.

From standby you can select Menu > Entertainment > More applications to find links to additional applications for your phone. Some of the applications are free of charge or free to try out.

To install an application

1. From standby select Menu > Settings > General > Install.
2. Select the application and choose Details to view information about the certificate.
3. If the certificate details are OK, select Install and follow the instructions in the phone. The application is installed in the Entertainment folder.

Removing applications

Sometimes it is necessary to remove installed applications to free up storage space.

To remove an application

1. From standby select Menu > Settings > General > Uninstall.
2. Select the application and select Uninstall > Yes.

Master reset

All user data, as well as preinstalled media files (including, for example, backgrounds, ringtones and pictures), is deleted and factory settings restored.

If you back up your user data using PC Suite for Sony Ericsson, you can restore it after a master reset.

To reset the phone

1. From standby select Menu > Settings > General > Master reset.
2. If you want to keep installed applications, unmark Delete all user installed applications.
3. Select Delete > Yes.
4. Enter the phone lock code and select Done.

Power save

To save power, you can set the display to go blank after a period of inactivity.

This is the Internet version of the User's guide. © Print only for private use.

To enable power save

1 From standby select Menu > Settings > Display > Backlight.
2 Mark the Power save enabled check box.

Screen saver

You can use a picture as a screen saver.

To set a screen saver

- From standby select Menu > Settings > Display > Screen saver.
- Select Open and choose a type.

This is the Internet version of the User's guide. © Print only for private use.

Important information

Sony Ericsson Consumer Web site

On *www.sonyericsson.com/support* there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your phone more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty period. Learn more about the warranty conditions in the Important information.

On *www.sonyericsson.com* you will find the latest support tools and information. For operator-specific services and features, please contact your network operator.

You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number).

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Country	Phone number	Email address
Anguilla	1-800-080-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Antigua	1-800-081-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Argentina	0800-333-7427 (Toll Free)	questions.CO@support.sonyericsson.com
Australia	1300-650-050 (Toll Free)	questions.AU@support.sonyericsson.com
Austria	0810 200 245	questions.AT@support.sonyericsson.com
Bahamas	1-800-205-6062 (Toll Free)	questions.CO@support.sonyericsson.com
Barbados	1-800-082-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Belarus	8 82 00 361 0001	questions.BY@support.sonyericsson.com
Belgium	02-0745 1611	questions.BE@support.sonyericsson.com
Belize	AN 815, PIN 5597 (Toll Free)	questions.CO@support.sonyericsson.com
Bermuda	1-800-083-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Bolivia	800-100-542 (Toll Free)	questions.CO@support.sonyericsson.com
Brazil	4001-0444 (Toll Free)	questions.BR@support.sonyericsson.com
Bulgaria	0800 18 778	questions.BG@support.sonyericsson.com
Canada	1 866 766 9374 (Toll Free)	questions.CA@support.sonyericsson.com
Cayman Islands	1-800-084-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Central and Southern Africa	+27 11 506 0123	questions.CF@support.sonyericsson.com
Chile	1230-020-0656 (Toll Free)	questions.CO@support.sonyericsson.com

This is the Internet version of the User's guide. © Print only for private use.

China	+86 400 810 0000	questions.CN@support.sonyericsson.com
Colombia	01800-0966-080 (Toll Free)	questions.CO@support.sonyericsson.com
Costa Rica	0 800 011 0400 (Toll Free)	questions.CO@support.sonyericsson.com
Croatia	062 000 000	questions.HR@support.sonyericsson.com
Cyprus	0800 90 909	questions.CY@support.sonyericsson.com
Czech Republic	0844 550 055	questions.CZ@support.sonyericsson.com
Denmark	3331 2828	questions.DK@support.sonyericsson.com
Dominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Dominican Republic	1-800-751-3370 (Toll Free)	questions.CO@support.sonyericsson.com
Ecuador	1-800-0102-50 (Toll Free)	questions.CO@support.sonyericsson.com
Egypt	16727	questions.EG@support.sonyericsson.com
El Salvador	800-6323 (Toll Free)	questions.CO@support.sonyericsson.com
Estonia	06 032 032	questions.EE@support.sonyericsson.com
Finland	09 299 2000	questions.FI@support.sonyericsson.com
France	0825 383 383	questions.FR@support.sonyericsson.com
Germany	0180 534 2020 (Local rate)	questions.DE@support.sonyericsson.com
Greece	0801 11 810 810	
	+30 210 899 19 19 (from mobile phone)	
		questions.GR@support.sonyericsson.com
Guatemala	1-800-300-0057 (Toll Free)	questions.CO@support.sonyericsson.com
Haiti	AN 193, PIN 5598 (Toll Free)	questions.CO@support.sonyericsson.com
Honduras	AN 8000122, PIN 5599 (Toll Free)	questions.CO@support.sonyericsson.com
Hong Kong	+852 8203 8863	questions.HK@support.sonyericsson.com
Hungary	01 880 47 47	questions.HU@support.sonyericsson.com
India	1800 11 1800 (Toll Free)	
	+91 (011) 39011111	questions.IN@support.sonyericsson.com
Indonesia	021 2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italy	06 48895206 (Local rate)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com
Jordan	+971 4 3919 880	questions.JO@support.sonyericsson.com
Kuwait	+971 4 3919 880	questions.KW@support.sonyericsson.com
Latvia	67 21 43 01	questions.LV@support.sonyericsson.com
Lithuania	8 700 55030	questions.LT@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free)	questions.MY@support.sonyericsson.com
Mexico	0 1800 000 4722 (Toll Free)	questions.MX@support.sonyericsson.com
Morocco	+212 2 2958 344	questions.MA@support.sonyericsson.com

This is the Internet version of the User's guide. © Print only for private use.

Netherlands	0900 8998318	questions.NL@support.sonyericsson.com
Netherlands Antilles	001-866-509-8660 (Toll Free)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (Toll Free)	questions.CO@support.sonyericsson.com
Norway	Standard Support: 815 00 840 (local rate)	
	Premium Support: 820 59 040	questions.NO@support.sonyericsson.com
Pakistan	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panama	00800-787-0009 (Toll Free)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (Toll Free)	questions.CO@support.sonyericsson.com
Peru	0800-532-38 (Toll Free)	questions.CO@support.sonyericsson.com
Philippines	+63 2 7891860	questions.PH@support.sonyericsson.com
Poland	+48 22 691 6200	questions.PL@support.sonyericsson.com
Portugal	808 204 466 (Local rate)	questions.PT@support.sonyericsson.com
Romania	+40 21 401 0401	questions.RO@support.sonyericsson.com
Russia	+7 495 7870986	questions.RU@support.sonyericsson.com
Saudi Arabia	800-8200-727	questions.SA@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovak Republic	02 5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
Spain	902 180 576 (Local rate)	questions.ES@support.sonyericsson.com
St. Kitts	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com
St. Vincent	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Sweden	Standard Support: 013 24 45 00 (local rate)	
	Premium Support: 0900 20 44 500	questions.SE@support.sonyericsson.com
Switzerland	0848 824 040	questions.CH@support.sonyericsson.com
Taiwan	+886 2 25625511	questions.TW@support.sonyericsson.com
Thailand	02 2483 030	questions.TH@support.sonyericsson.com
Trinidad and Tobago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
Turkey	+90 212 473 77 77	questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
Middle East & North Africa	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
United Kingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
United States	1 866 766 9374 (Toll Free)	questions.US@support.sonyericsson.com
Uruguay	000-401-787-013 (Toll Free)	questions.CO@support.sonyericsson.com
Venezuela	0-800-1-00-2250 (Toll Free)	questions.CO@support.sonyericsson.com
Vietnam	1900 1525 (Toll Free)	questions.VN@support.sonyericsson.com

This is the Internet version of the User's guide. © Print only for private use.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).

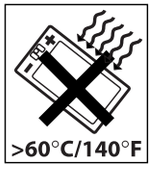

- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend your product.

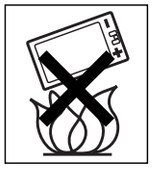

- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.

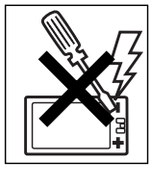

- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for intended purpose only. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

This is the Internet version of the User's guide. © Print only for private use.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your mobile phone or Bluetooth handsfree will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and

This is the Internet version of the User's guide. © Print only for private use.

when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to: *www.sonyericsson.com/health*.

Malware

Malware (short for malicious software) is software that can harm your mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your mobile phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to *www.sonyericsson-snc.com*.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.

Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the mobile phone purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

This is the Internet version of the User's guide. © Print only for private use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If your device requires an adapter for insertion into the mobile phone or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dust or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User Licence Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited license to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this License.

This license exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the license immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that

This is the Internet version of the User's guide. © Print only for private use.

the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

This license is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Limited warranty

Sony Ericsson Mobile Communications AB, Nya Vattentornet, SE-221 88 Lund, Sweden (Sony Ericsson), or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit *www.sonyericsson.com* to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
3. This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other

This is the Internet version of the User's guide. © Print only for private use.

than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and colour may occur between the phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.

5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.

6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

7 Tampering with any of the seals on the Product will void the warranty.

8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/regions/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer’s rights against the dealer arising from their sales / purchase contract.

*Geographical scope of the warranty

If you have purchased your Product in a country/region member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country/region or in Switzerland or in Turkey, under the warranty conditions prevailing in the country/region in which you require servicing, provided that an identical Product is sold in such country/region by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country/region you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country/region of

This is the Internet version of the User's guide. © Print only for private use.

original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries/regions. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This is the Internet version of the User's guide. © Print only for private use.

Declaration of Conformity for G700 Business Edition

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product
Sony Ericsson type FAD-3880001-BV
and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.2.1, EN 301 489-24:V1.3.1 and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC.

Lund, February 2008

CE 0682

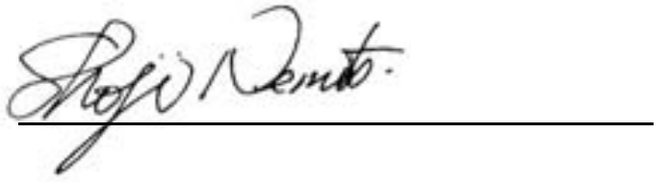

Shoji Nemoto,
Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

This is the Internet version of the User's guide. © Print only for private use.

Index

B

Backup of phone data 50
Battery 10
Blog 42
Bluetooth™ wireless technology .. 52

C

Call log 31
Certificates 53
Connections manager 52
Contacts 32

E

Email 37
Emergency call 30
Entering
    symbols 24
Example
    using keypad prediction 23
    using multitap 23
    using Pinyin input 24
    using Stroke input 24
    using wild card key 24

F

File manager 54
File transfer mode 50
Flight mode 14
FM radio 47
Folders in messaging 34

H

Handsfree settings 31
Handwriting
    accented letters 26
    Chinese characters 25
    Chinese punctuations 25
    extended characters 27
    latin letters 26
    multi-character recognition ... 27
    numbers 26
    special gestures 27
Handwriting recognition 24

I

IMEI number 12
Import contacts 19
input
    text 22
Installing applications 55
International call 29
Internet browser 41
Internet wizard 13

This is the Internet version of the User's guide. © Print only for private use.

K

Keylock 12
Keypad prediction
example 23

M

Main menu 16
overview 17
Master reset 55
Memory card 19
Messaging 34
MMS 35
Multitap
example 23
Music 45

N

Navigation 15
Notes 20

O

On/off 14

P

Pairing 52
Panels 15
PC Suite 50
Photo
view 43
Picture editor 44
Pinyin input
example 24
PlayNow™ 47
Power save 55
Protected files 54
Push email 39

R

RSS feeds 42

S

Screen in text mode 24
Screen saver 56
Selecting
text 28
Silent mode 19
SIM card 10
Slide show 44
SMS 35
Sounds and alerts 19
Speed dial 29
Standby 14
Status bar 18
Stroke input
example 24

This is the Internet version of the User's guide. © Print only for private use.

Switching
input languages 24
keypad prediction mode 23
Pinyin and Stroke 24
to handwriting recognition mode 24
to keypad prediction mode 22
Symbols
entering 24
Synchronization 51

T

Text
selection, highlight 28
Text input 22
switching between Pinyin and Stroke 24
using handwriting recognition 24
using on-screen keypad 28
using the keypad 22
TrackID™ 49
Transferring files 50

U

Update software 19
Updating software 19
USB file transfer 50

V

Video
play 46

W

Wap push 52
Web feeds 42
Web guide 6
Wild card key
example 24

This is the Internet version of the User's guide. © Print only for private use.